

## US UK

### Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

### OS support

Windows XP / 7 / 8 / 10

### Functions

1. Computer USB port interfaces with the keyboard without needing the installation of additional drivers or software.
2. Multi-level backlight brightness
  - a) Press and hold the [FN] key, and then press the arrow key "↑" to increase the backlight brightness of the keyboard.
  - b) Press and hold the [FN] key, and then press the arrow key "↓" key to decrease the backlight brightness of the keyboard.
3. Breathing and rotate speed
  - a) Press and hold the [FN] key, and then press the arrow key "←" to slow down.
  - b) Press and hold the [FN] key, and then press the arrow key "→" keys to speed up.
4. Selectable backlight modes
  - a) Press and hold the [FN] key, and then press the INS (M) key to switch between the 9 modes
5. FN function key for backlight gaming modes
  - a) FN+1 (L1): First Person Shooter (FPS) Mode
    - ESC, W, A, S, D, ↑, ←, ↓, →
  - b) FN+2 (L2): Cross Fire (CF) Mode
    - Q, W, E, R, A, S, D, G, B, 1, 2, 3, 4, 5, Space, L -Ctrl, L-Shift, L-Alt, Tab, F1, F2, F3, Home, End, PgUp, PgDn, PrtSc, ScrLk
  - c) FN+3 (L3): Call of Duty (COD) Mode
    - Q, W, E, R, T, A, S, D, F, G, C, V, 1, 2, 3, 4, 5, 6, 7, L-Ctrl, L-Shift
  - d) FN+4 (L4): Real Time Strategy (RTS) Mode

- Q, W, E, R, T, Y, U, P, A, S, D, F, G, H, K, L, Z, X, N, M, Space, L-Ctrl, L-Shift, L-Alt 1, 2, 3, 4, 5, 6, 7, 8, 9, 0
  - e) FN+5 (L5): LOL/DOTA Mode
    - Q, W, E, R, D, F, G, V, B, L-Ctrl, L-Alt, Tab, Space, ~, 1, 2, 3, 4, 5, 6, Esc
  - f) FN+6 (L6): Racing Mode
    - W, A, S, D, R, ↑, ↓, ←, →, L-Ctrl, L-Shift, L-Alt
  - g) FN+7 (L7): NBA Mode
    - W, E, R, A, S, F, Z, X, C, V, Space, ↑, ↓, ←, →, 1, 2, 3, 4, L-Shift, L-Ctrl, L-Alt
  - h) FN+8 (L8): LOL/DOTA Simple Mode
    - Q, W, E, R, D, F, B, 1, 2, 3, 4, 5, 6
  - i) FN+9 (LR1), FN+0 (LR2): Custom Game Modes
    - With these game modes, you can create your own custom lighting schemes for your own needs and preferences.
      - 1) Press FN+9 (LR1) or FN+0 (LR2) to choose which game mode to customize.
      - 2) Press FN+Home (LR) to start recording your custom scheme
      - 3) Press any key to turn on the backlight on the pressed key. Press again to disable backlight on the pressed key.
      - 4) Press FN+End (S) to save your scheme.
    - If you want to clear any custom game mode, press FN+PageUp.
6. Swap functions of [W][A][S][D] and arrow keys
- a) Press and hold the [FN] key, and then press the [W] key to interchange the function of the four letter keys [W][A][S][D] and the four arrow keys [↑][↓][←][→]
  - b) Repeat the above operation to restore the previous setting.
7. Disabling the Windows [WIN] key
- a) To disable the [WIN] key: Press and hold the [FN] key, and then press [WIN] key to turn off [WIN] key in order to avoid going to desktop while gaming if user presses [WIN] key by mistake.
  - b) Repeat the above operation to restore the function.

### 8. Side light adjustment

FN+PAUSE switching among 4 effects

### 9. Multimedia function: 12 multimedia keys. Access by pressing the [FN] key and one of the [F1]-[F12] keys at the same time.

- a) FN+F1: Open My Computer
- b) FN+F2: Search
- c) FN+F3: Open Calculator
- d) FN+F4: Open Media Player
- e) FN+F5: Previous
- f) FN+F6: Next
- g) FN+F7: Play/Pause
- h) FN+F8: Stop
- i) FN+F9: Mute
- j) FN+F10: Lower Volume
- k) FN+F11: Raise Volume
- l) FN+F12: Lock Keyboard
  - 1) Press to lock the functions of all keys
  - 2) Press again to unlock

### FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboard's USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



REDRAGON  
HADES  
MECHANICAL GAMING KEYBOARD

Wired Mechanical Gaming Keyboard Operating Instructions

型号	红龙K623-P1B/8472	备注：尺寸：100x100mm (风琴折页)	文件编号	核准	版本	A.0
名称	说明书	材质：80g书写纸				
日期	2021-7-7	印刷：单黑色双面印刷				
页码	1 OF 1	文件编号				
绘图	雷国建	审核				