

<p>US UK</p> <p>Dear user</p> <p>Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.</p> <ol style="list-style-type: none"> 1. Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. 	<p>OS support</p> <p>Windows XP/Vista/Win7/Win8/Win10/Win 11</p> <p>Keyboard operation</p> <p>Keyboard main area lighting effects: Support total 11 effects (Default Wave, Ripple, Trigger, Neon, Stars, Flows, Changing, Normal ON, Breathing, Single key ON, Single key OFF)</p> <ul style="list-style-type: none"> <1> FN+INS to switch effects <2> FN+ALT_R to switch main area light effect <3> FN+M to adjust brightness level <4> FN+<- to adjust light speed level <5> FN+Space to set the color you want <p>Keyboard edge lighting effects:</p> <p>Support total 4 effects (Default Wave, mixed color, Neon, Normal ON (in Red/blue/green/purple/yellow/cyan), OFF)</p> <ul style="list-style-type: none"> <1> FN+ALT_L to switch main area light effect <2> FN+X to adjust brightness level <3> FN+Z to adjust light speed level <p>Support Win key lock: FN+WIN_L () to lock Win key, press it again to unlock.</p>	<p>Function keys instruction:</p> <pre> <1> FN + [1!] = F1 <2> FN + [2@] = F2 <3> FN + [3#] = F3 <4> FN + [4\$] = F4 <5> FN + [5%] = F5 <6> FN + [6^] = F6 <7> FN + [7&] = F7 <8> FN + [8*] = F8 <9> FN + [9!] = F9 <10> FN + [0] = F10 <11> FN + [-_] = F11 <12> FN + [=+] = F12 <13> FN + [[{}}] = Insert <14> FN + [}] = DEL <15> FN + [;:] = Home <16> FN + ["] = End <17> FN + [.>] = PgUp <18> FN + [?>] = PgDn <19> FN + [A] = left arrow key <20> FN + [W] = up arrow key <21> FN + [S] = down arrow key <22> FN + [D] = right arrow key <23> Fn+Esc back to factory setting </pre>	<p>FAQ</p> <ol style="list-style-type: none"> 1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer. 2. If you spill liquid on the keyboard, please remove keyboards USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again. 	<p>FCC Statement</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
---	---	--	---	---

<p>RU</p> <p>Уважаемый пользователь</p> <p>спасибо за выбор марки REDRAGON С целью защиты ваших прав и для более качественного обслуживания мы просим читывать наши условия гарантии.</p> <ol style="list-style-type: none"> 1. В течение гарантийного периода гарантия распространяется на устранение повреждений, вызванных проблемами в электрической цепи. Повреждения, произошедшие по вине человека, такие как разборка, жесткие удары, погружение в воду, подключение к цепи с ненормативным током или напряжением, а также ущерб, вызванный стихийными бедствиями, включая пожар, наводнение или землетрясение, в условия гарантии не включены. 2. Расходные детали (например, педаль для ног) и работы по замене запасных частей в гарантию не включены. 	<p>ПоддержкаОС</p> <p>Windows XP/Vista/Win7/Win8/Win10/Win 11</p> <p>Операции с клавиатурой</p> <p>Эффекты подсветки основной зоны клавиатуры: всего 11 эффектов (Волна по умолчанию, Рябь, Триггер, Неон, Звезды, Потоки, Изменение, Звезды, Обычно включено, Пульсация, Одна клавиша включена, Одна клавиша выключена)</p> <ul style="list-style-type: none"> <1> FN+INS – переключение между эффектами <2> FN+ALT_R – смена эффекта подсветки основной зоны <3> FN+M – настройка уровня яркости <4> FN+<- – настройка скорости пробежки подсветки <5> FN+Space – выбор цвета подсветки <p>Эффекты подсветки по краю клавиатуры:</p> <p>всего 4 эффекта (Волна по умолчанию, Смешанный цвет, Неон, Обычно включено (красный / синий / зеленый / фиолетовый / желтый / голубой), Выключено)</p> <ul style="list-style-type: none"> <1> FN+ ALT-L смена эффекта подсветки основной зоны <2> FN+ X – настройка уровня яркости <3> FN+ Z – настройка скорости пробежки подсветки <p>Блокировка клавиши Win: FN+WIN_L() – нажмите для блокировки клавиши Win, нажмите повторно, чтобы снять блокировку.</p>	<p>Функциональные клавиши:</p> <pre> <1> FN + [1!] = F1 <2> FN + [2@] = F2 <3> FN + [3#] = F3 <4> FN + [4\$] = F4 <5> FN + [5%] = F5 <6> FN + [6^] = F6 <7> FN + [7&] = F7 <8> FN + [8*] = F8 <9> FN + [9!] = F9 <10> FN + [0] = F10 <11> FN + [-_] = F11 <12> FN + [=+] = F12 <13> FN + [[{}}] = Insert <14> FN + [}] = DEL <15> FN + [;:] = Home <16> FN + ["] = End <17> FN + [.>] = PgUp <18> FN + [?>] = PgDn <19> FN + [A] = Клавиша со стрелкой влево <20> FN + [W] = Клавиша со стрелкой вверх <21> FN + [S] = Клавиша со стрелкой вниз <22> FN + [D] = Клавиша со стрелкой вправо <23> FN + Esc = Возврат к заводским настройкам </pre>	<p>Часто задаваемые вопросы</p> <ol style="list-style-type: none"> Если клавиатура не отвечает, убедитесь, что ее USB-разъем надежно вставлен в соответствующий USB-порт компьютера, или попробуйте вставить USB-разъем в другой порт компьютера. При пролитии жидкости на клавиатуру, немедленно отсоедините ее USB-разъем от компьютера. Сотрите жидкость и, прежде чем использовать вновь, поместите клавиатуру в теплое место, например, под лампу, чтобы она просохла естественным образом. 	<p>REDRAGON</p> <p>ALIEN SUPER SIZE MECHANICAL KEYBOARD</p> <p>Mechanical Gaming Keyboard User manual</p>
--	---	---	---	---

<p>型号</p>	<p>红龙K605/8489</p>	<p>备注: 尺寸: 100x100mm (折页) 材质: 80g书写纸</p>	<p>日期</p>	<p>2024-9-5</p>	<p>印刷: 单黑色双面印刷</p>	<p>页码</p>	<p>1 OF 1</p>	<p>文件编号</p>	<p>绘图</p>	<p>雷国建</p>	<p>审核</p>	<p>核准</p>	<p>版本</p>	<p>A.1</p>
-----------	--------------------	--	-----------	-----------------	--------------------	-----------	---------------	-------------	-----------	------------	-----------	-----------	-----------	------------