



# REDRAGON ORPHEUS

STEREO GAMING SPEAKER/SOUND BAR

Stereo Gaming Speaker/Sound Bar Operating Instructions

EN

In order for users to use the speaker correctly and ensure good performance of the speaker, please read carefully and observe:  
Do not hit the machine severely to avoid damage.  
Do not touch benzene, thinner and other chemicals.  
Please do not approach the strong magnetic field, electric field. Avoid direct light or heating appliances.  
Do not disassemble, repair or modify by yourself.  
Do not listen at a higher volume to avoid adverse effects on your hearing.  
Waste packaging, old electronic products, please classify and properly handle.



1. Connect the ear socket.
2. Turn on the power switch clockwise, and the indicator on the knob is on.  
Turn clockwise to increase the volume, turn counterclockwise to decrease the volume.
3. Microphone connection port.

1

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

**1. Cleaning Instructions:** Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.

**2. Ergonomic Health and Safety Guide:** Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.

**3. WARNING:** The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.

2

PT

Para utilizar a caixa de som corretamente e desfrutar do melhor desempenho do equipamento, leia com atenção e siga as instruções:

Não bata no equipamento com força para evitar danos.  
Não deixe entrar em contato com benzina, redutor e outros produtos químicos.

Não aproxime de campos elétricos e magnéticos fortes.  
Evite a luz solar direta ou a proximidade de aparelhos emissores de calor.

Não desmonte nem tente fazer reparos ou modificações por conta própria.  
Não ouça no volume máximo para evitar efeitos danosos à sua audição.

Ao descartar embalagens e produtos eletrônicos antigos, identifique-os e tome as precauções necessárias.



1. Conecte na tomada do fone.
2. Gire o botão de energia no sentido horário e o indicador no botão acenderá.  
Gire no sentido horário para aumentar o volume e anti-horário para reduzir o volume.
3. Entrada para microfone de 3,5 mm.

3

RU

Для правильного использования динамика и обеспечения его хорошей работы, пожалуйста, внимательно прочтите и соблюдайте следующие правила:

Не ударяйте устройство сильно, чтобы избежать повреждений.

Не прикасайтесь к бензину, растворителю и другим химическим веществам.

Не приближайтесь к сильным магнитным и электрическим полям.

Избегайте прямого воздействия света или нагревательных приборов.

Не разбирайте, не ремонтируйте и не модифицируйте устройство самостоятельно.

Не слушайте на высокой громкости, чтобы избежать негативного воздействия на слух.

Утилизируйте и правильно утилизируйте отходы и старые электронные изделия.



1. Подключите наушники.
2. Поверните выключатель питания по часовой стрелке, загорится индикатор на регуляторе.  
Поворот по часовой стрелке увеличивает громкость, поворот против часовой стрелки уменьшает громкость.
3. Разъем для подключения микрофона.

4

尺寸:73x104mm