


Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are not included in our warranty.

1

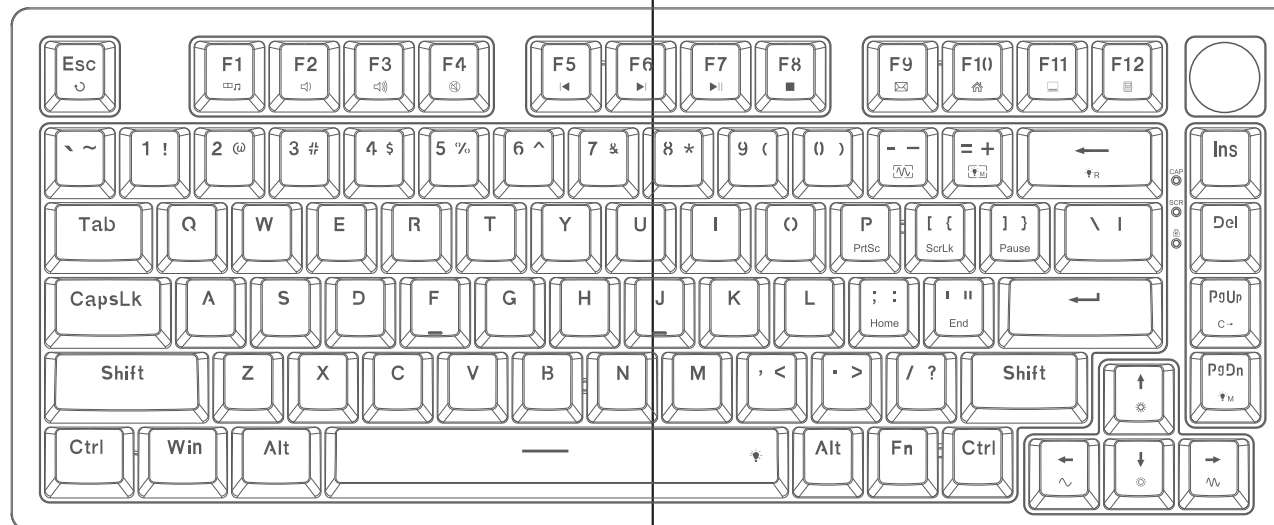

2

3

Installation and Functions

1. **Installation:** connect to the computer and use directly, no driver software needed.
2. **Keyboard interface:** USB interface.
3. **System support:** Windows.
4. **Support boot-up running LED lighting effect and other combination lighting effect animations**
5. **Super cool backlight effect**
Press FN+PGDN to switch lighting effect: Drifting, shadow, sine light wave, rotating windmill, colorful waterfall, blooming flowers, constant bright mode, breathing mode, dreamy rainbow, ready to go, walking in the rain, key ripples, stars and snow, continuous flow.
6. **Backlight color adjustment**
Press FN+PGUP to switch backlight color: adjust seven colors + mixed colors (red, green, blue, yellow, pink, cyan, white, RGB).
7. **WIN key lock**
Press FN + Win key to lock Win key function, and press again to unlock.
8. **Adjust backlight brightness**
Press FN + Arrow keys "↑" and "↓" to adjust backlight brightness in 5 levels.
9. **Adjust backlight streamer speed**
Press FN + Arrow keys "←" and "→" to adjust backlight streamer speed in 5 levels.
10. **Turn off/on backlight**
FN+SPACE = turn backlight on and off.
11. **Sidelight control**
FN+ (=+) key to switch sidelight mode (streamer neon - constant bright (colorful single color) - colorful breathing - off).
Cycle switch.
FN+(-) (4-speed cycle switch under streamer, neon, breathing state).

4

12. Custom light recording

Press FN + BACKSPACE to enter light custom mode. By default, the ESC, A, S, D, W, ↑, ↓, ←, and → keys are lit. Press FN + BACKSPACE again to enter the recording state. The 3 indicator lights continue to flash (turn off when recording ends). Press the same key continuously to the specified color, and then continue to set other keys to form the required backlight pattern. After completing the setting, press FN + BACKSPACE to store it. When playing the light macro, press FN + BACKSPACE, and the defined key lights will always be on (the light of FN key cannot be customized).

13. Wheel function description

Default music mode: volume control, key switch = mute, FN + knob switch (loop switching mode) switch to backlight mode: brightness adjustment, key switch = switch backlight mode.

14. FN composite key function

FN+F1: Player	FN+F10: Home page
FN+F2: Volume down	FN+F11: My Computer
FN+F3: Volume up	FN+F12: Calculator
FN+F4: Mute	FN+[P]: PrtSc
FN+F5: Previous track	FN+[[]: ScrLk
FN+F6: Next track	FN+[]]: Pause
FN+F7: Play/pause	FN+[;]: Home
FN+F8: stop	FN+[']: End
FN+F9: Email	

5

15. Restore factory settings

Press and hold FN+ESC for three seconds to restore factory settings and clear all settings.

FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboard's USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 -- Reorient or relocate the receiving antenna.
 -- Increase the separation between the equipment and receiver.
 -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -- Consult the dealer or an experienced radio/TV technician for help
 This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7



REDRAGON

PENUMBRA

75% CNC ALUMINUM WIRED MECHANICAL KEYBOARD

Gaming Keyboard User Manual

型号	K736W-PRO-M/7503		备注：尺寸：100x100mm(折页)		
名称	说明书		材质：80g书写纸		
日期	2025-1-6		印刷：单黑色双面印刷		
页码	1 OF 1		文件编号		
绘图	邓子松	审核	香敏琪	核准	版本 A.1

封面