


US UK

Dear user

Thank you for choosing REDDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

1

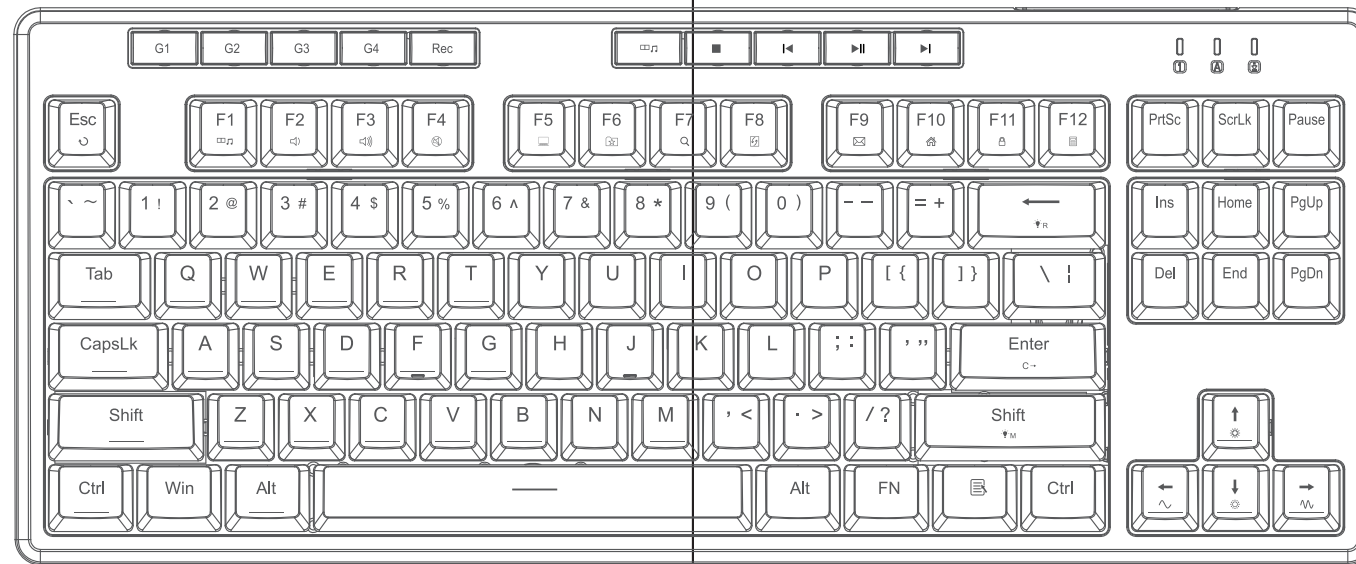


2

3

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

 How to connect the keyboard with multiple devices



Type C port

Wired Connection

Connect the keyboard to computer with USB cable. The computer will recognize and configure the keyboard automatically.

Product Features

Backlight

1. Press [FN]+[R_SHIFT] to cycling switch the default 8 backlight patterns.
2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.
Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
3. Backlight color switching (available on limited light patterns): Press [FN]+[ENTER] to cycling switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB.
4. Backlight DIY: press [FN]+[BACK SPACE] to enter DIY mode, the keyboard backlight turn off, and LED indicator are flashing, press [FN]+[1~6] to set backlight color, once backlight settings are finishing, press [FN]+[BACK SPACE] to save.

Macro record

When the keyboard is not on macro mode or macro setting not settled, [G1~G4] keys value is [F1~F4] by default.

1. Press [Rec] button to start macro recording, LED 1 and A will flash slowly.
2. Press [G1~G4] to select a profile to record macro, LED 1 and A will flash quickly. Press the

4

3. After finishing macro key recording, press [Rec] to save the macro. To output the macro, Press [G1~G4] to output the macro.

Delete recorded macro setting:

Delete all macro setting: Press& hold [FN]+ [Rec] for 5s, LED indicator flash 1 time, all macro setting was deleted.
Delete partial macro setting: Press [Rec], LED indicator flash slowly, press the [G] key you want to delete macro, LED indicator flash quickly, Press [Rec] again, the macro setting was deleted.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock.

Shortcut keys:

Media Player Stop playing Pre track Play/Pause Next track

Double press [FN] key to switch [F1-F12] to below shortcut keys, repeat to recovery.

F1: Media player	F7: Search
F2: Volume -	F8: Refresh
F3: Volume +	F9: E-mail
F4: Mute	F10: Internet browser homepage
F5: My computer	F11: Lock keyboard
F6: My favorite	F12: Calculator

5

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power save mode & How to recharge

On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.

When battery is low, the backlight will turn off, the power LED will blink red slowly to remind user to charge the keyboard.

Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn OFF.

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7



REDDRAGON

SHIVA 87

REDDRAGON WIRED 87 KEYS
RGB BACKLIGHT GAMING KEYBOARD

Mechanical Gaming Keyboard
User manual

型号	K516-RGB 7235	备注：尺寸：100x100mm (折页)	
名称	说明书	材质：80g书写纸	
日期	2024-12-10	印刷：单黑色双面印刷	
页码	1 OF 1	文件编号	
绘图	雷国建	审核	香敏琪
		核准	
		版本	A.1

