



REDRAGON

OTIIM MAGNETIC

WIRED CONNECTION
ULTRAMAG MAGNETIC SWITCH KEYBOARD



Please scan here to
download user manual



Gaming Keyboard User Manual


US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are not included in our warranty.

1

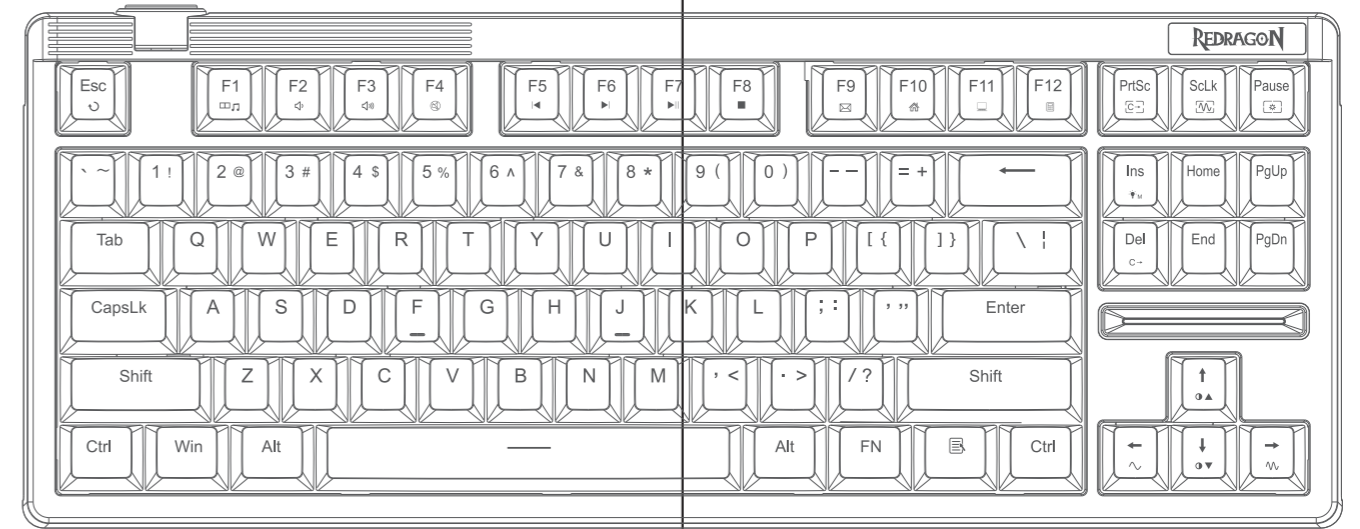

2

 
3

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with device

Type C port



Wired Connection

Connect the keyboard to computer with USB cable.
The computer will recognize and configure the keyboard automatically.

IMPORTANT: CALIBRATE THE MAGNETIC SWITCH BEFORE USING THE MAGNETIC SWITCH FUNCTION!

Product Features Backlight

1. The default 22 backlight patterns switch by pressing [FN] + [INS] to cyclic switch the light patterns.
2. Backlight color switching (available on limited patterns): Press [FN] + [DEL] to cyclic switch: Red, Green, Blue, Yellow, Pink, Cyan, White, RGB.
3. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.
Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
4. Side light bars light mode adjustment:
Press [FN]+[PAUSE] to cyclic switch 5 light modes.
Press [FN]+[SCRLLK] to cyclic adjust lighting speed (available on limited mode).
Press [FN]+[PRTSC] to cyclic adjust lighting color (available on limited mode).

4

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock.

Commands of key combinations with [FN] key

FN+F1: Media Player	FN+F7: Play/Pause
FN+F2: Volume -	FN+F8: Stop Play
FN+F3: Volume +	FN+F9: E-mail
FN+F4: Mute	FN+F10: Browser Homepage
FN+F5: Pre Track	FN+F11: This PC
FN+F6: Next Track	FN+F12: Calculator

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Knob button function

Turn the knob to adjust volume by default, press the knob button to mute/unmute; press [FN]+[Knob button] to switch to keyboard backlight adjustment, turn the knob to adjust backlight brightness, press the knob button to switch backlight pattern.

For magnetic switch RT function& more adjustable function, please go to Redragon official website: www.redragonzone.com to download& install mouse software, to enable more possibility.

WARNING: Please keep objects with strong magnetic fields away from the keyboard to prevent any malfunction in the magnetic switch parts.

5

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.



6

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

7

型号	HL-K729RGB-M/7452	备注：尺寸：100x100mm(折页)		Easternimes Tech
名称	说明书	材质：80g书写纸		
日期	2025-7-7	印刷：单黑色双面印刷		
页码	1 OF 1	文件编号		
绘图	邓子松	审核	香敏琪	核准
				版本
				A.0