封面

REDRAGON

URANUS PRO 82

75% CNC ALUMINUM ALLOY
3-MODE QMK MECHANICAL KEYBOARD

Please scan here to download user manual

Gaming Keyboard User Manual

封底

REDRAGON

RoHS

ANATEL 02981-24-06556

0.25-5 W USB PD

US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

CAUTION:
Important Safety Note: For transportation and storage safety, the battery of this product is shipped at a reduced charge level. If you encounter insufficient battery upon first use, please fully charge the device before operation.

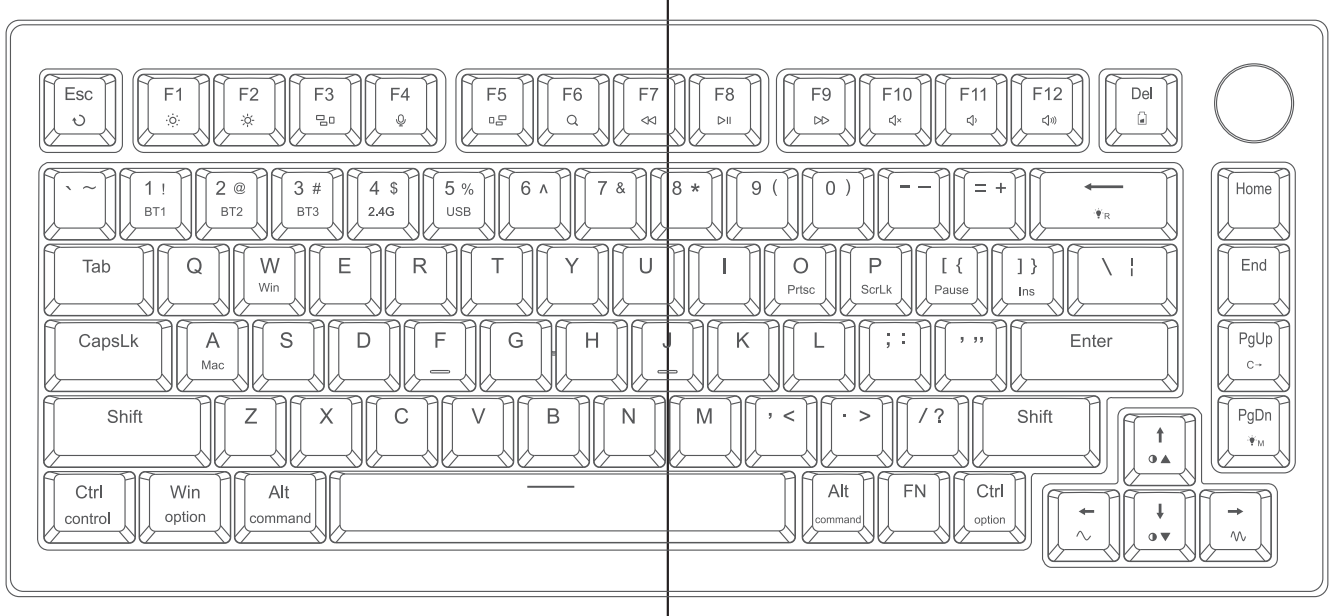

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with multiple devices

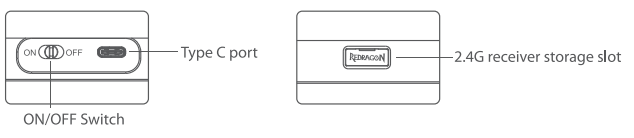

Wired Connection

1.Connect the keyboard to the computer with USB cable, [ON/OFF] switch on "OFF", the computer will recognize and configure the keyboard automatically. [ON/OFF] switch on "ON", press [FN]+[S] to switch to wired connection mode.
The battery will be charging when wired connection, LED under [ESC] key will light on Red till fully charged.

2.4G Wireless Connection

1. ON/OFF switch on "ON", press [FN]+[4], [4] key flash in Red,other keys will light OFF, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically, after connected the backlight will recovery.
2. If auto-connection is failed, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[4] for 3 seconds, [4] key flash quickly in Red, other keys will light OFF, plug the USB receiver into computer USB port, after connected the backlight will recovery.

BT Connection

1. ON/OFF switch on "ON".
2. Press and hold [FN]+[1/2/3] for 3 seconds, [1/2/3] flash in Red quickly, other keys will light OFF.
   Turn on BT function and search for available device, it will find "BT5.0 Keyboard_ 1/2/3" device names. Select a BT name to pair, after paired the backlight will recovery.
3. To switch the BT connections between BT1/BT2/BT3, press [FN]+ [1/2/3].

Product Features

Backlight

1. The default 16 backlight patterns switch by pressing [FN] + [PGDN] to cyclic switch the light patterns.
2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.
   Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
3. Backlight color switching (available on limited light patterns): [FN] + [PGUP] to cyclic switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB.
4. Backlight DIY: Press [FN] + [Back Space] to enter DIY mode, [ESC] [A] [S] [W] [D] [←] [↑] [→] [↓] lights on by default, Press [FN] + [Back Space] again to start recording, [FN] will flash till the recording completed, continuously press the key to select the color you want to set(except [FN] key), once key light color setting are completed, press [FN] + [Back space] to save.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.).

Win/ MAC shortcut keys switching

Press [FN]+[W] to switch to Windows O.S. shortcut keys.
Press [FN]+[A] to switch to MAC O.S. shortcut keys.

Commands of key combinations with [FN] key

FN+[O]: Print Screen	FN+[P]: Scroll Lock
FN+[[[ ]: Pause	FN+[ ]]]: Insert
WINDOWS O.S.	**MAC O.S.**
FN+F1: Screen brightness -	F1: Screen brightness -/ FN+F1=F1
FN+F2: Screen brightness +	F2: Screen brightness + / FN+F2=F2
FN+F3: Multiple windows	F3: Multiple task / FN+F3=F3
FN+F4: Speech recognition (O.S. win10 or later)	F4: Siri / FN+F4=F4
FN+F5: Show desktop	F5: Show desktop / FN+F5=F5
FN+F6: Search	F6: Search / FN+F6=F6
FN+F7: Pre track	F7: Pre track / FN+F7=F7
FN+F8: Play/Pause	F8: Play/Pause / FN+F8=F8
FN+F9: Next track	F9: Next track / FN+F9=F9
FN+F10: Mute	F10: Mute / FN+F10=F10
FN+F11: Volume -	F11: Volume down / FN+F11=F11
FN+F12: Volume +	F12:Volume up / FN+F12=F12

[Knob button] function

Default to adjust Volume, press knob button to mute/unmute. Press [FN] + [Knob button] to switch to backlight adjustment, turn the knob to adjust backlight brightness, press knob button to cycling switch backlight pattern.

NRO – 6KRO switching

Press [FN] + [B] to cyclic switching N-key roll over (NRO, defaulted) mode and 6 keys roll over (6KRO) mode.

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power saves mode & how to recharge

On wireless/BT connection mode, when keyboard without any operation for over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.
When battery is low, the LED under [ESC] will blink red slowly,
connect the keyboard with computer for charging, [ESC] will steady on Red when charging, after fully charged turn to current backlight pattern.

Web-based software:

Connect the keyboard to your computer with USB cable, visit https://30171.redragon-zone.com to use Redragon web-based software. To use VIA web software, please visit www.redragonzone.com and download .json file for your keyboard, then visit https://www.usevia.app to use VIA web software.

⚠Warning: Charging current: 5 V⎓1A
Built-in Li-ion battery 1 unit
DO NOT use fast-charging adapter to recharge your keyboard!

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

REDRAGON QUALITY ASSURED

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

⚠ CAUTION:
Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

ISED WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licenceexempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteurexempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation. Sciences et DéveloppementéconomiqueCanada applicables aux appareils radio exempts de licence.
L'exploitation est autorisée aux deux conditions suivantes:
(1) Fappareil ne doit pas produire de brouillage, et
(2) Fappareil doit accepter tout brouillage radioélectrique subi, même si e brouillage est susceptible d'en compromettre le fonctionnement 'appareil numérique du ciem conforme

1. Cleaning Instructions: Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.
2. Ergonomic Health and Safety Guide: Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.
3. WARNING: The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
   (1) This device may not cause harmful interference, and
   (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

RU

Уважаемый пользователь

спасибо за выбор марки REDRAGON. С целью защиты ваших прав и для более качественного обслуживания мы просим учитывать наши условия гарантии.

1. В течение гарантийного периода гарантия распространяется на устранение повреждений, вызванных проблемами в электрической цепи. Повреждения, произошедшие по вине человека, такие как разборка, жесткие удары, погружение в воду, подключение к цепи с ненормативным током или напряжением, а также ущерб, вызванный стихийными бедствиями, включая пожар, наводнение или землетрясение, в условия гарантии не включены.
2. Расходные детали (например, педаль для ног) и работы по замене запасных частей в гарантию не включены.

⚠ ВНИМАНИЕ:
Важное примечание по технике безопасности: В целях безопасности при транспортировке и хранении батарея данного изделия поставляется с пониженным уровнем заряда. Если при первом использовании вы обнаружите недостаток заряда батареи, пожалуйста, полностью зарядите устройство перед началом работы.

Как подключить клавиатуру к различным устройствам

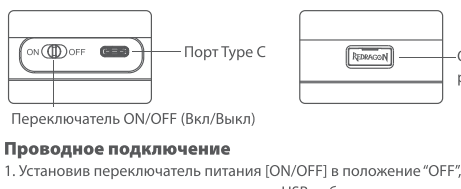

Проводное подключение

1. Установив переключатель питания [ON/OFF] в положение "OFF", подключите клавиатуру к компьютеру с помощью USB-кабеля, компьютер выполнит распознавание и настройку клавиатуры автоматически. Установите переключатель [ON/OFF] в положение "ON", нажмите [FN]+[S], чтобы перейти в проводной режим подключения.
   При проводном подключении будет происходить зарядка аккумулятора, светодиод под кнопкой [ESC] будет гореть красным цветом до достижения полной зарядки.

Беспроводное подключение на частоте 2,4 ГГц

1. Переведите переключатель ON/OFF в положение "ON" и нажмите сочетание клавиш [FN]+[4]. Индикатор клавиши [4] начнет мигать красным, подсветка других клавиш будет выключена. Подключите беспроводной USB-ресивер к USB-порту компьютера, клавиатура автоматически подключится к компьютеру, а также включится подсветка клавиш.
2. Если автоматическое подключение выполнить не удалось или вы хотите подключиться к новому устройству, извлеките USB-ресивер из разъема USB, затем нажмите и удерживайте [FN]+[4] в течение 3 секунд, Индикатор клавиши [4] начнет мигать красным цветом, подсветка других клавиш будет выключена. Подключите USB-ресивер к USB-порту компьютера, после чего подсветка клавиш включится.

Подключение по BT

1. Переведите переключатель ON/OFF в положение "ON".

2. Нажмите и удерживайте [FN]+[1/2/3] в течение 3 секунд, индикатор клавиши [1/2/3] начнет быстро мигать красным, подсветка остальных клавиш будет выключена.
   Включите функцию BT и выполните поиск доступных устройств. Будет найдено устройство "BT5.0 Keyboard_ 1/2/3". Выберите данное устройство BT для сопряжения, после выполнения сопряжения подсветка клавиш включится.
3. Для смены BT-подключения между устройствами BT1/BT2/BT3, нажмите [FN]+[1/2/3].

Описание функций

Подсветка

1. 16 режимов подсветки, доступные по умолчанию, переключаются циклическим образом, путем нажатия клавиш [FN] + [PgDn].
2. Нажмите [FN] + [←/→], чтобы настроить скорость пробежки подсветки, всего 5 уровней.
   Нажмите [FN] + [↑/↓], чтобы настроить яркость подсветки, всего 5 уровней.
3. Переключение цвета подсветки (доступно несколько режимов): Нажмите [FN] + [PgUp] для циклического переключения цветов – красный, зеленый, синий, желтый, фиолетовый, голубой, белый, RGB-режим.
4. Пользовательский режим подсветки: Нажмите [FN] + [Back Space], чтобы войти в пользовательский режим. Клавиши [ESC] [A] [S] [W] [D] [←] [↑] [→] [↓] подсвечиваются по умолчанию. Вновь нажмите [FN] + [Back Space], чтобы начать запись, индикатор клавиши [FN] будет мигать до завершения записи. Нажимайте нужную клавишу несколько раз, чтобы выбрать цвет, который вы хотите установить (цвет клавиши [FN] установить нельзя). Завершив настройку подсветки, нажмите [FN] + [Back Space], чтобы сохранить результат.

Блокировка клавиши [WIN]

Нажмите [FN] + [WIN], чтобы заблокировать клавишу [WIN], нажмите повторно для снятия блокировки (при использовании на MAC OS блокировка клавиши не выполняется).

Переключение между режимами горячих клавиш для Win / MAC

Нажмите [FN] + [W] для переключения на горячие клавиши Windows.
Нажмите [FN] + [A] для переключения на горячие клавиши MAC.

Командные комбинации с клавишей [FN]

FN+[O]: Print Screen	FN+[P]: Scroll Lock
FN+[[[ ]: Pause	FN+[ ]]]: Insert
ОС WINDOWS	**ОС MAC**
FN+F1: Яркость экрана -	F1: Яркость экрана -/ FN+F1= F1
FN+F2: Яркость экрана +	F2: Яркость экрана +/ FN+F2=F2
FN+F3: Несколько окон	F3: Различные задачи / FN+F3=F3
FN+F4: Голосовой ввод (Windows 10 или более поздняя версия)	F4: Siri / FN+F4=F4
FN+F5: Показать рабочий стол	F5: Показать рабочий стол / FN+F5=F5
FN+F6: Поиск	F6: Поиск / FN+F6=F6
FN+F7: Предыдущий трек	F7: Предыдущий трек / FN+F7=F7
FN+F8: Воспроизведение/Пауза	F8: Воспроизведение/Пауза / FN+F8=F8
FN+F9: Следующий трек	F9: Следующий трек / FN+F9=F9
FN+F10: Без звука	F10: Без звука / FN+F10=F10
FN+F11: Громкость -	F11: Уменьшить громкость / FN+F11=F11
FN+F11: Громкость +	F12:Увеличить громкость / FN+F12=F12
FN+F12: Громкость +	

Функции кнопки-регулятора

По умолчанию кнопка-регулятор выполняет настройку громкости. Нажмите на кнопку, чтобы выключить/включить звук. Нажмите сочетание [FN]+[кнопка-регулятор], чтобы войти в режим настройки подсветки.

Для настройки яркости подсветки вращайте кнопку-регулятор, а для циклического переключения между режимами подсветки нажимайте кнопку.

Переключение режимов NRO – 6KRO

Нажмите [FN] + [B] для переключения режима NRO (N-key Rollover – неограниченное количество одновременный нажатий, действует по умолчанию) и режима 6KRO (6 keys roll over – одновременное нажатие 6 клавиш).

Сброс к настройкам по умолчанию

Нажмите и удерживайте [FN]+[ESC] в течение 3 секунд.

Режим энергосбережения и зарядка

В режиме беспроводного/BT-подключения, если не пользоваться клавиатурой более 3 минут, подсветка клавиатуры отключается для экономии заряда аккумулятора, а при отсутствии действий с клавиатуру более 30 минут включается режим энергосбережения. Нажмите любую клавишу для ее пробуждения.
Если аккумулятор разряжен, индикатор клавиши [ESC] будет медленно мигать красным.
Подключите клавиатуру к компьютеру для зарядки, во время зарядки индикатор клавиши [ESC] будет гореть красным цветом, после полной зарядки включится текущий режим подсветки.

⚠Внимание: зарядный ток: 5 В⎓1А
Встроенный литий-ионный аккумулятор, 1 шт.
НЕ используйте адаптер для быстрой зарядки клавиатуры!

Часто задаваемые вопросы

1. Если клавиатура не реагирует, убедитесь в том, что USB-кабель клавиатуры вставлен в соответствующий USB-порт на компьютере, также попробуйте использовать другой USB-порт на компьютере.
2. Если вы пролили жидкость на клавиатуру, отключите USB-кабель клавиатуры от компьютера. Вытрите излишки жидкости и поместите клавиатуру в сухое и вентилируемое место. Убедитесь, что клавиатура полностью высохла естественным образом, прежде чем использовать ее вновь.

REDRAGON QUALITY ASSURED

型号	HL-K739/7492		备注： 尺寸：100x100mm(折页) 材质：80g书写纸 印刷：单黑色双面印刷				Easternimes Tech
名称	说明书						
日期	2026-4-24						
页码	1 OF 1		文件编号				
绘图	邓子松	审核	香敏琪	核准		版本	A.0