封面

REDRAGON

SHIVA TKL

REDRAGON WIRED 87 KEYS
RGB BACKLIGHT GAMING KEYBOARD

Mechanical Gaming Keyboard
User manual

Please scan here to download user manual

US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with multiple devices

Wired Connection

Connect the keyboard to computer with USB cable.
The computer will recognize and configure the keyboard automatically.

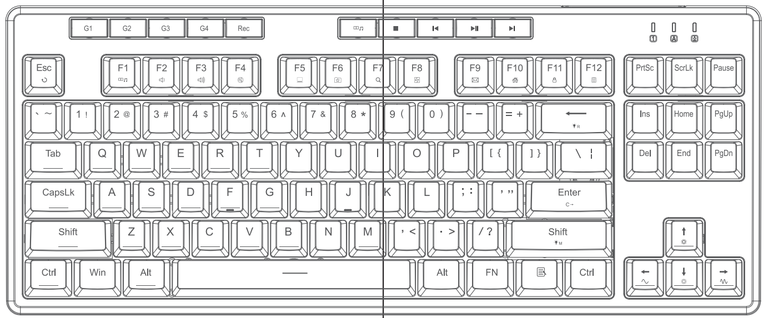

Product Features

Backlight

1. Press [FN]+[R_SHIFT] to cycling switch the default 8 backlight patterns.
2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.
   Press [FN] + [↑ / ↓] to adjust backlight brightness, total 5 levels.
3. Backlight color switching (available on limited light patterns): Press [FN]+[ENTER] to cycling switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB.
4. Backlight DIY: press [FN]+[BACK SPACE] to enter DIY mode, the keyboard backlight turn off, and LED indicator are flashing, press [FN]+[1~6] to set backlight color, once backlight settings are finishing, press [FN]+[BACK SPACE] to save.

Macro record

When the keyboard is not on macro mode or macro setting not settled, [G1~G4] keys value is [F1~F4] by default.

1. Press [Rec] button to start macro recording, LED 1 and A will flash slowly.
2. Press [G1~G4] to select a profile to record macro, LED 1 and A will flash quickly. Press the key you want to record into macro, K516RGB supporting max 64 keys macro recording.
3. After finishing macro key recording, press [Rec] to save the macro.
   To output the macro, Press [G1~G4] to output the macro.

Delete recorded macro setting:

Delete all macro setting: Press& hold [FN]+ [Rec] for 5s, LED indicator flash 1 time, all macro setting was deleted.
Delete partial macro setting: Press [Rec], LED indicator flash slowly, press the [G] key you want to delete macro, LED indicator flash quickly, Press [Rec] again, the macro setting was deleted.

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock.

Shortcut keys:

Media Player Stop playing Pre track Play/Pause Next track

Double press [FN] key to switch [F1-F12] to below shortcut keys, repeat to recovery.

F1: Media player	F7: Search
F2: Volume -	F8: Refresh
F3: Volume +	F9: E-mail
F4: Mute	F10: Internet browser homepage
F5: My computer	F11: Lock keyboard
F6: My favorite	F12: Calculator

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power save mode & How to recharge

On wireless/BT connection mode, when keyboard without any operation over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation over 30 minutes, the keyboard will enter power save mode, press any key to wake up.
When battery is low, the backlight will turn off, the power LED will blink red slowly to remind user to charge the keyboard.

Connect the keyboard with computer for charging, the power LED will steady on Red when charging, after fully charged turn OFF.

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excessliquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
   (1) This device may not cause harmful interference, and
   (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

1. Cleaning Instructions: Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them.
2. Ergonomic Health and Safety Guide: Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes.
3. WARNING: The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard.

RU

Уважаемый пользователь!

Благодарим вас за выбор продукции компании REDRAGON . Для защиты ваших прав и улучшения обслуживания клиентов мы предоставляем следующие гарантии.

1. В течение гарантийного срока предоставляется гарантийный ремонт для поломок из-за неисправностей в электросхеме. Другие повреждения, вызванные такими действиями, как демонтаж, сильное воздействие, погружение в воду, подключение к сети с неверными параметрами силы тока или напряжения, а также повреждения, вызванные такими стихийными бедствиями, как пожар, наводнение или землетрясение, не включены в гарантийное обслуживание.
2. Гарантия не распространяется на детали, подверженные износу (например, ножки), и на сменные запасные части.

Поддержка ОС

Windows XP/ Vista/ Win 7/ Win 8/ Win 10 / Win 11/ Mac OS

Как подключить клавиатуру к устройству

Проводное соединение

Подключите клавиатуру к компьютеру с помощью USB-кабеля.
Компьютер автоматически распознает и настроит клавиатуру.

Характеристики продукта

Подсветка

1. Нажмите [FN]+[R_SHIFT], чтобы переключать 8 стандартных режимов подсветки.
2. Нажмите [FN] + [← / →] для регулировки скорости вращения подсветки, всего 5 уровней.

Нажмите [FN]+[↑ / ↓], чтобы отрегулировать яркость подсветки (всего 5 уровней).
3. Переключение цвета подсветки (доступно для ограниченного набора режимов освещения): Нажмите [FN]+[ENTER] дляПереключатель режимов езды: красный, зеленый, синий, желтый, фиолетовый, голубой, белый, RGB.
4. Настройка подсветки клавиатуры: нажмите [FN]+[BACK SPACE], чтобы войти в режим DIY, подсветка клавиатуры включится.При выключении светодиодный индикатор мигает. Нажмите [FN]+[1~6], чтобы установить цвет подсветки. После включения подсветки...Настройки завершаются, нажмите [FN]+[BACK SPACE] для сохранения.

Макрозапись

Если клавиатура не находится в режиме макросов или настройки макросов не установлены, значения клавиш [G1~G4]По умолчанию используется клавиша [F1~F4].

1. Нажмите кнопку [Rec], чтобы начать макрозапись; светодиоды 1 и A будут медленно мигать.
2. Нажмите [G1~G4], чтобы выбрать профиль для записи макроса; светодиоды 1 и A начнут быстро мигать. Нажмите клавишу, которую хотите записать в макрос; K516RGB поддерживает запись макросов максимум на 64 клавиши.
3. После завершения записи макроса нажмите [Rec], чтобы сохранить макрос.
   Для вывода макроса нажмите [G1~G4].

Удалить записанные настройки макроса

Удаление всех макронастроек: Нажмите и удерживайте [FN] + [Rec] в течение 5 секунд, светодиодный индикатор мигнет 1 раз, все макронастройки будут удалены.
Удаление части настроек макроса: Нажмите [Rec], светодиодный индикатор будет медленно мигать, нажмите клавишу [G], которую хотите удалить, светодиодный индикатор будет быстро мигать, нажмите [Rec] еще раз, настройки макроса будут удалены.

[WIN] блокировка

Нажмите [FN] + [WIN], чтобы заблокировать клавишу [WIN], повторите, чтобы разблокировать.

Мультимедийные сочетания клавиш

Медиаплеер Прекратите играть Предварительный трек

Воспроизведение/Пауза Следующий трек

Двойное нажатие клавиши [FN] переключит клавиши [F1-F12] на указанные ниже сочетания клавиш, повторите для восстановления.

F1: Медиаплеер	F7:Поиск
F2: Громкость -	F8: Обновить
F3: Громкость +	F9: Электронная почта
F4: Отключить звук	F10: Домашняя страница интернет-браузера
F5: Мой компьютер	F11: Блокировка клавиатуры
F6: Мой любимый	F12: Калькулятор

Восстановить заводские настройки

Нажмите и удерживайте [FN] + [ESC] в течение 3 секунд.

Режим энергосбережения и как зарядить аккумулятор

В режиме беспроводного/BT-соединения, если клавиатура не используется более 3

минут, подсветка клавиатуры выключается для экономии заряда батареи; если клавиатура не используется более 30 минут, она переходит в режим энергосбережения, для пробуждения необходимо нажать любую клавишу.
При низком уровне заряда батареи подсветка выключится, а индикатор питания будет медленно мигать красным, напоминая пользователю о необходимости зарядить клавиатуру.
Подключите клавиатуру к компьютеру для зарядки. Во время зарядки светодиод питания будет гореть красным цветом, после полной зарядки он выключится.

Часто задаваемые вопросы

1. Если клавиатура не реагирует, проверьте правильность подключения USB-кабеля клавиатуры к соответствующему USB-порту компьютера или попробуйте использовать другой USB-порт на компьютере.
2. Если на клавиатуру попала жидкость, немедленно отсоедините USB-кабель клавиатуры от компьютера. Вытрите излишки жидкости и поместите клавиатуру в сухое и хорошо проветриваемое место. Перед следующим использованием убедитесь, что клавиатура полностью высохла естественным образом.

型号	HL K516-RGB/7235	备注： 尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷					Easterntimes Tech
名称	说明书						
日期	2026-4-10						
页码	1 OF 1	文件编号					
绘图	雷国建	审核	香敏琪	核准		版本	A.0